

Wagen . . .

Bcm (Bauart 029) 60 Plätze

106/O	104/M	102/U	R	10
105/O	103/M	101/U		
96/O	94/M	92/U	R	9
95/O	93/M	91/U		
86/O	84/M	82/U	N	8
85/O	83/M	81/U		
76/O	74/M	72/U	N	7
75/O	73/M	71/U		
66/O	64/M	62/U	N	6
65/O	63/M	61/U		
56/O	54/M	52/U	N	5
55/O	53/M	51/U		
46/O	44/M	42/U	N	4
45/O	43/M	41/U		
36/O	34/M	32/U	N	3
35/O	33/M	31/U		
26/O	24/M	22/U	N	2
25/O	23/M	21/U		
16/O	14/M	12/U	N	1
15/O	13/M	11/U		

106/O	104/M	102/U	9 n a G
105/O	103/M	101/U	
96/O	94/M	92/U	
95/O	93/M	91/U	
86/O	84/M	82/U	
85/O	83/M	81/U	
76/O	74/M	72/U	
75/O	73/M	71/U	
66/O	64/M	62/U	
65/O	63/M	61/U	
56/O	54/M	52/U	
55/O	53/M	51/U	
46/O	44/M	42/U	
45/O	43/M	41/U	
36/O	34/M	32/U	
35/O	33/M	31/U	
26/O	24/M	22/U	
25/O	23/M	21/U	
16/O	14/M	12/U	
15/O	13/M	11/U	

Dieser Wagen kann in Sitz- oder Liegestellung betrieben werden!

Achtung: Platznummer/O = Obere Liege; Platznummer/M = Mittlere Liege; Platznummer/U = Untere Liege;